



**NetCom USA**


[www.netcomusa.com](http://www.netcomusa.com)

**NetCom USA NR6-8 Raid Storage  
Hardware User Manual**

**PCIe to Serial ATA II**

**Disk Array System**

**Version 1.1**

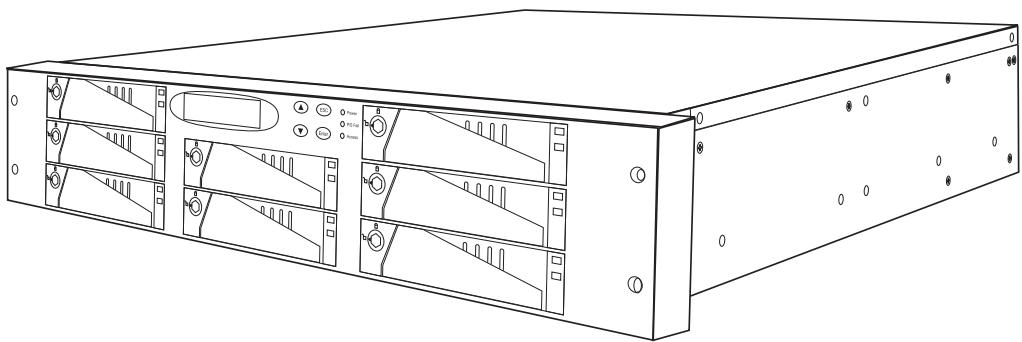

# **NR6-8**

**PCIe to Serial ATA II**  
**Disk Array System**

**Hardware User Manual**

# Table of Contents

Preface.....	i, ii, iii, iv, v
--------------	-------------------

---

## Chapter 1 System Requirements

Operating Environment .....	1
VT100 Terminal Settings .....	1

---

## Chapter 2 Basic Configuration

Unpacking .....	2
Components .....	3
NR6-8 .....Front Panel .....	3
Disk Tray .....	4
NR6-8 ..... Rear View .....	5
Installing Disks .....	6, 7, 8
Making Connections .....	9
Connecting the Host Interface .....	9
Connecting PCIe cable to the server .....	10
Connecting and Turning on the Power .....	11

---

## Chapter 3 Maintenance

Replacing a Disk .....	12
Replacing a Power Supply .....	13, 14, 15
Upgrading Memory .....	16
Replacing a FAN module .....	17

---

## Appendix

Hardware Specifications .....	18, 19
-------------------------------	--------

# Preface

## About this Manual

This manual is designed to make the NR6-8 disk array system as easy to use as possible. Information contained in this document has been checked for accuracy. Information and specifications are subject to change without notice.

## Copyright Notice

© Copyright 2008 Netcom USA, Inc.

All rights reserved. This disk array system and related documentation are protected by copyright and are distributed under licenses restricting their use, copying, and distribution. No part of this documentation may be reproduced in any form by any means without prior written authorization of Netcom USA, Inc. and its licensors, if any.

## Conventions

---

### Caution



This symbol is used to remind users to pay attention to important descriptions regarding usage, maintenance, repair or additional important information related to this disk array system.

---

### Note



This symbol is used to remind users of useful information that can make procedures such as configuration easier to accomplish.

---

## Important Safety Instructions, Care and Handling



Before starting, take a few minutes to read this manual. Read all of these instructions and save this manual for later reference.



Protect the disk array system from extremely high or low temperatures. Let the disk array system warm (or cool) to room temperature before using it.



Protect the disk array system from being bumped or dropped. Do not place the disk array system on an unstable cart, stand, or table. It may fall, causing serious damage to the product.



Keep the disk array system away from magnetic forces.



Do not use the disk array system near water.



Keep the disk array system away from dust, sand, or dirt.



Gaps and openings in the cabinet are provided for ventilation. Never block or cover these openings, because the disk array system may overheat and become unreliable. Don't place the disk array system on a bed, sofa, rug, or other similar surfaces.



Do not place the disk array system near or over a radiator or other heat sources.




Refer to the rating plate for the correct voltage and ensure that the appliance voltage corresponds to the supply voltage.

**NR6-8 Serial ATA II Disk Array Systems**



The appliance must be grounded. The disk array system is equipped with a 3-wire grounded type of power cord. This power cord will only fit into a grounded type of power outlet.

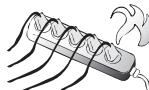

If an extension cord or a power center is used with the disk array system, make sure that the total current consumption of all products plugged into the wall outlet does not exceed the amperage rating.



Do not place the disk array system where the cord will be walked on.



Never push any kind of object into the disk array system through cabinet gaps and openings, since they may touch dangerous voltage points and cause a risk of fire or electric shock.



Unplug the power cord from the wall outlet before cleaning. Keep the disk array system dry. Do not use liquid cleaners, aerosol cleaners, or a wet cloth. Use a damp cloth for cleaning.



Except as specifically explained in this User Manual, do not attempt to service the disk array system by yourself. Opening or removing the covers may expose you to dangerous voltages.



Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- If the disk array system has been exposed to water or any liquid.
- If the disk array system has been dropped or the cabinet damaged.



Users should not remove the cover.



Disconnect all power supply cords before servicing.

## NR6-8 Serial ATA II Disk Array Systems

---

### Placement Notes



- The disk array system LCD panel can be damaged by exposure to direct sunlight. Limit exposure to subdued or indirect sunlight.
  - The disk array system should be used only in clean environments that are free from airborne contaminants such as dust, dirt, and smoke. Excessive moisture or oil particles in the air can also hinder disk array system performance.
  - To reduce the possibility of data errors caused by electromagnetic interference, locate the disk array system at least five feet away from electrical appliances and equipment that generates magnetic fields.
- 

### Power Supply Safety Notes



- To avoid electric shocks, do not use an extended power cord or an outlet that does not match the disk array system plug or leaves the plug exposed.
  - The disk array system has a 3-wire grounded plug. The third pin connects to ground; do not remove it.
  - If the power cord or plug is damaged or worn, unplug it immediately and contact a qualified service technician for maintenance.
  - To avoid fire or electric shocks, do not overload electric power outlets.
- 

### CAUTION : MULTIPLE POWER SOURCES



Disconnect all AC power cords to completely turn power off from the unit.

---

### CAUTION



Risk of explosion if battery is replaced by an incorrect type.  
Dispose of used batteries according to the instructions.

---

### CAUTION



Thumbscrews on the rear surface shall be secured by a screwdriver, screws cannot be loosened by bare hands to prevent unintentional access to the hazardous parts inside the equipment.

---

# 1 System Requirements

Ensure that the following requirements are met before installing the disk array system.

## Operating Environment

- 15 cm (6-inches) of space around the NR6-8 for proper ventilation
- ambient temperature of 5°C to 40°C (40°F to 104°F)
- ambient non-condensing relative humidity of 10% to 85%
- dust, smoke, and oil free environment
- no large magnetic fields, such as those generated by a high voltage power cables and motors, etc.
- no direct sunlight
- a flat, stable surface capable of supporting the NR6-8

## VT100 Terminal Settings

Refer to the following table for a summary of VT100 terminal settings required to communicate with the NR6-8. Refer to your system manual for instructions on setting up the VT100 terminal settings.

Item	Required Setting
Connection	Serial Port (COM1 or COM2)
Protocol	RS232 (Asynchronous)
Cabling	Null Modem cable
Baud Rate	115200
Data Bits	8
Stop Bit	1
Parity	None

# 2 Basic Configuration

This chapter describes the NR6-8 connections and disk installation.


## Unpacking

Contact your supplier if any of the following items are missing or damaged.

**Caution**




The NR6-8 is heavy. Be careful when lifting and moving it.

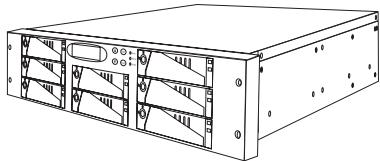


Disk Array System




Disk Tray Keys

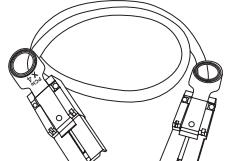

PCIe cable

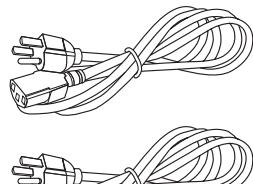


Power Cables

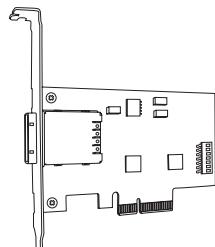


Controller Card



User Manual

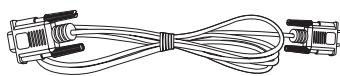


RS-232 Cable

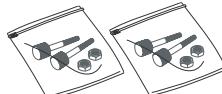


Fix Screw pack M5




Screw pack

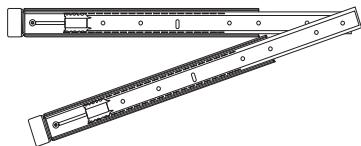

Rails (optional)

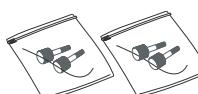


Fix Screw pack M4

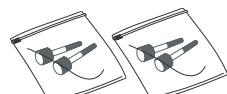

Fix Screw pack UNC #10-32



# Components

## NR6-8 Front Panel

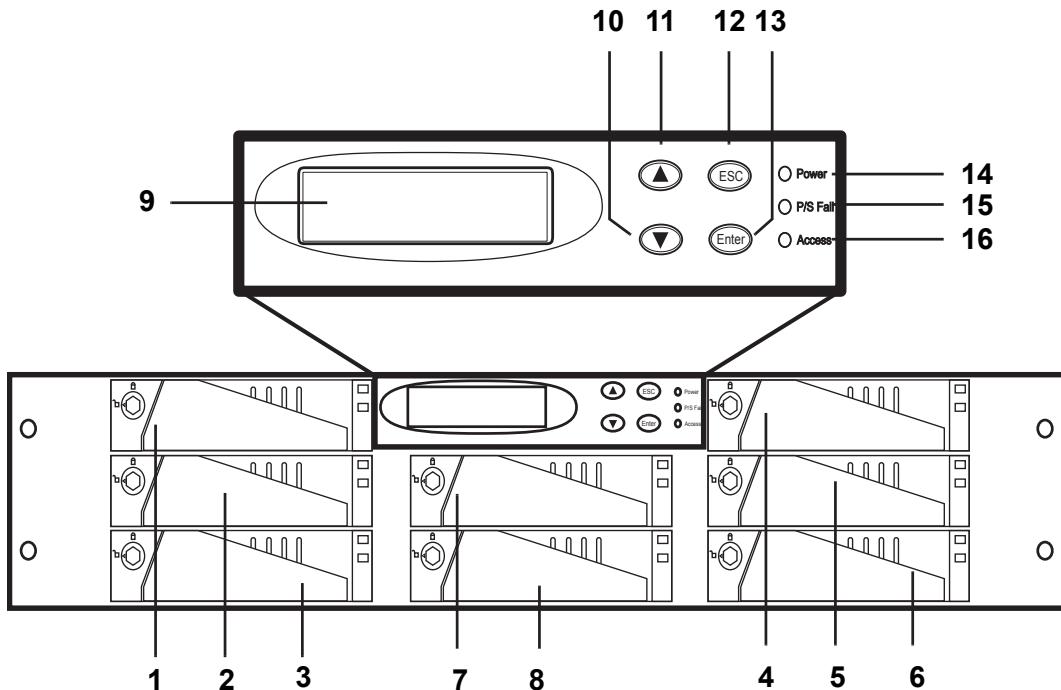

No.	Name	Description
1-8	Disk trays 1 to 8	Removable hot swap disk trays.
9	LCD panel	Displays warning, operating, and configuration information.
10	Down function button	Moves down in the LCD menus.
11	Up function button	Moves up in the LCD menus.
12	Escape function button	Returns to the previous LCD menu without making changes.
13	Enter function button	Selects a menu item or confirms a choice or entry.
14	Power-on indicator (green)	Indicates the NR6-8 power is on.
15	Power supply fail indicator (red)	Indicates a failed power supply.
16	Host computer access indicator	Indicates data transfer between the NR6-8 and the host computer.


## Disk Tray

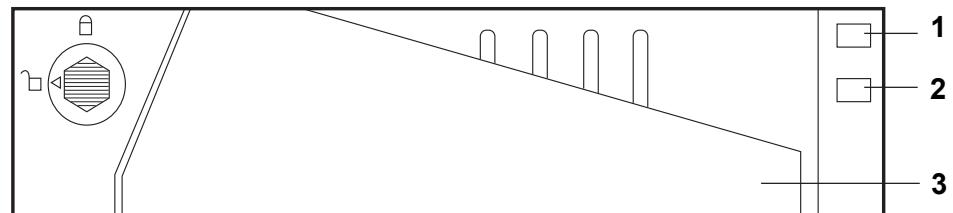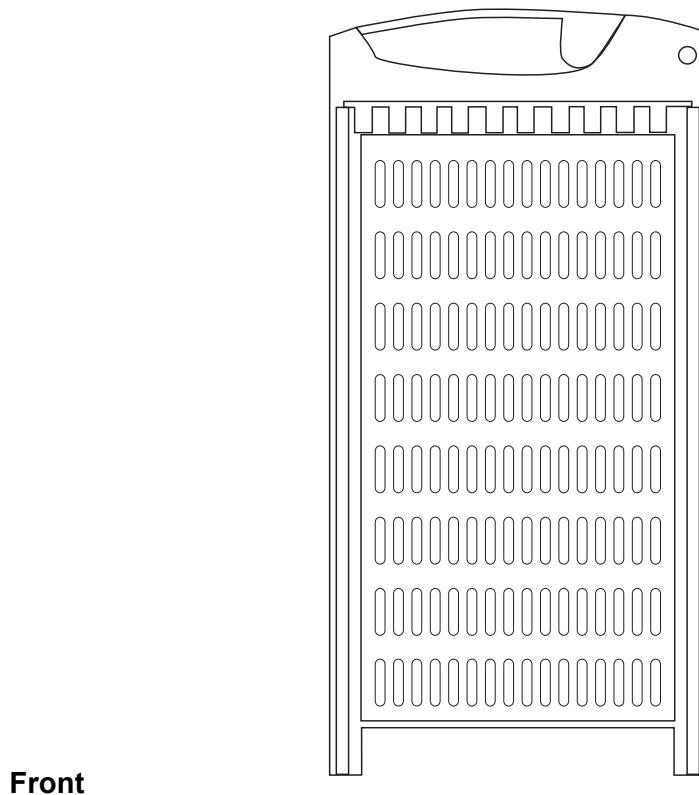

No.	Name	Description
1	Status LED	<ul style="list-style-type: none"> <li>Green-Disk online</li> <li>Red-No Disk</li> </ul>
2	Access LED	This blue LED indicates that the disk is being accessed.
3	Tray handle	Releases the disk tray.

4

## NR6-8 Serial ATA II Disk Array Systems

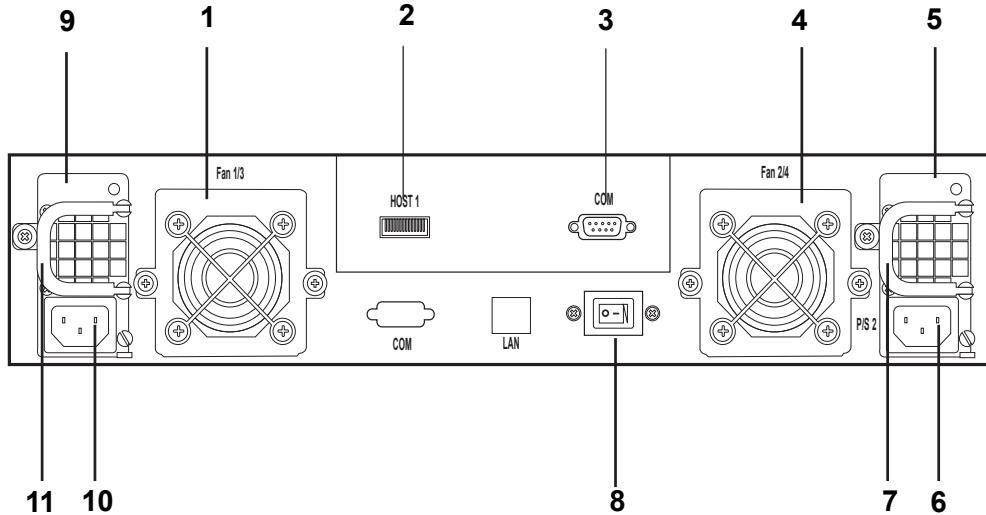**NR6-8 Rear View**


No.	Name	Description
<b>1</b>	Cooling fan 1	System cooling fan. Fan 1 is standard.
<b>2</b>	Host Port 1 (PCIe channel)	Connects to the host server.
<b>3</b>	RS-232 Port	Connects to a VT100 terminal or equivalent
<b>4</b>	Cooling fan 2	System cooling fan. Fan 2 is standard.
<b>5</b>	Power Supply 2	Removable redundant power supply 2.
<b>6</b>	Power Supply AC In	Connects to a 100-240 VAC power source.
<b>7</b>	Power Supply Handle	For power supply removal.
<b>8</b>	Power Switch	Switches the power on or off.
<b>9</b>	Power Supply 1	Removable redundant power supply 1.
<b>10</b>	Power Supply AC In	Connects to a 100-240 VAC power source.
<b>11</b>	Power Supply Handle	For power supply removal.

**NR6-8 Serial ATA II Disk Array Systems**


# Installing Disks

This section describes how to install disks in the NR6-8.


- 1 Unlock the disk tray with a disk tray key that is included with each system.

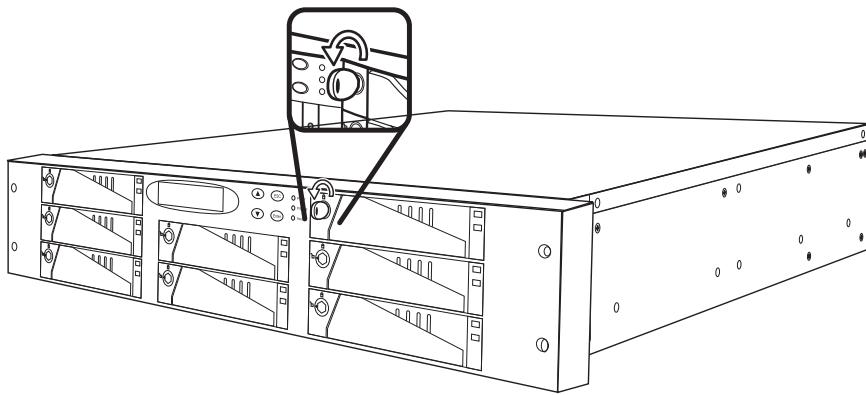

- 2 Gently pull the disk tray handle to an open position.

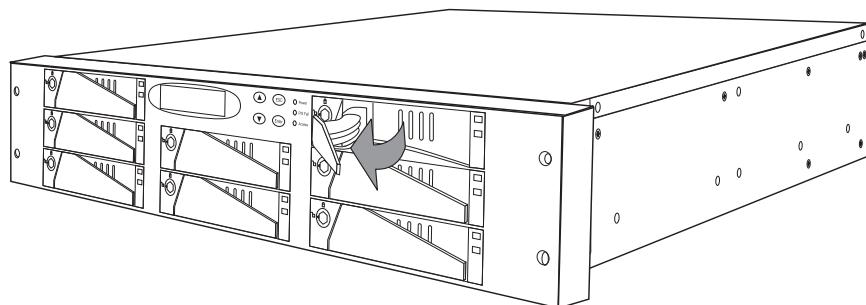


- 3 Remove the disk tray

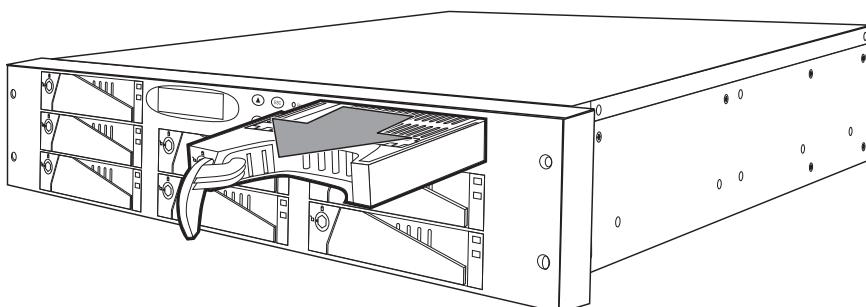


**NR6-8 Serial ATA II Disk Array Systems**


- 4** Insert the disk into the disk tray and fix into place with screws supplied with the disk.

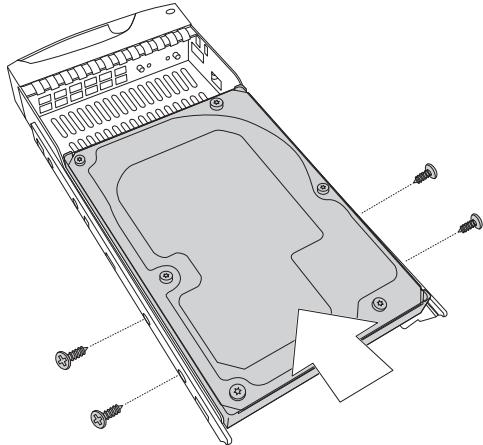

- 5** Slide the disk tray back into the empty slot.

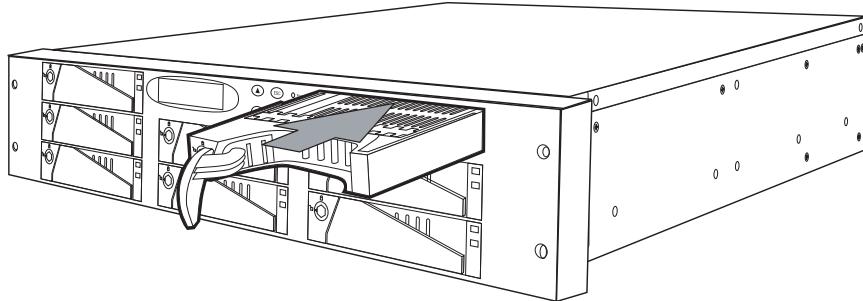


- 6** Slowly push the disk tray handle closed.

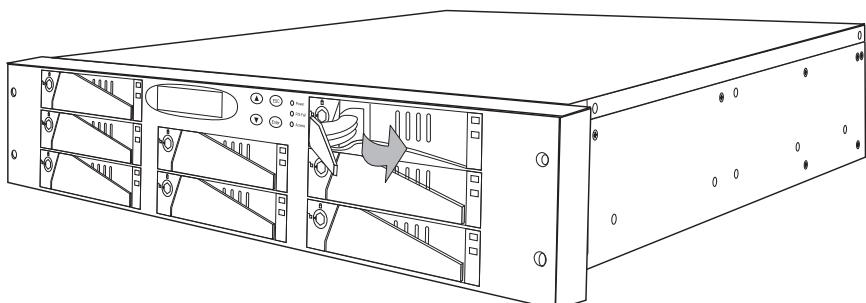

**NR6-8 Serial ATA II Disk Array Systems**

- 7** Lock the disk tray with the key.

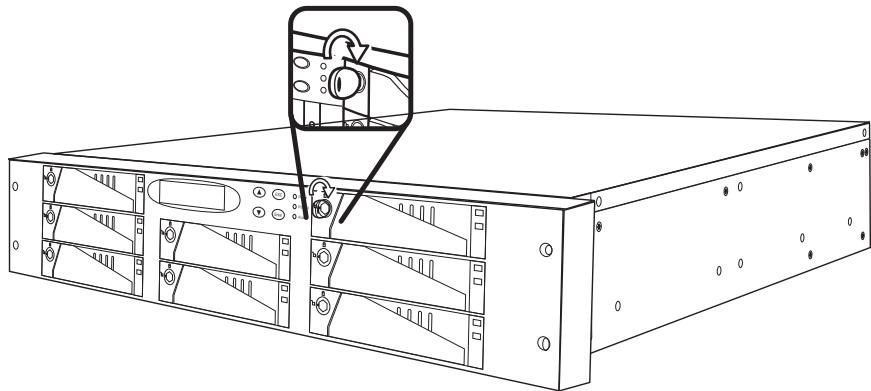

- 8** Repeat steps 1 to 8 until all of the required disks have been installed.

**NR6-8 Serial ATA II Disk Array Systems**

# Making Connections

After the required number of disks have been installed, external connections to the NR6-8 must be made. This section describes how to make all of the necessary connections.


## Connecting the Host Interface

The disk array system has PCIe interface. Refer to the following sections to make host interface connections.

### Small Computer Systems Interface

The NR6-8 has PCIe Interface. Follow there instructions to make connections.


- 1 Connect the PCIe cable to the top left connector of the NR6-8 host port 1 at the rear of the NR6-8.

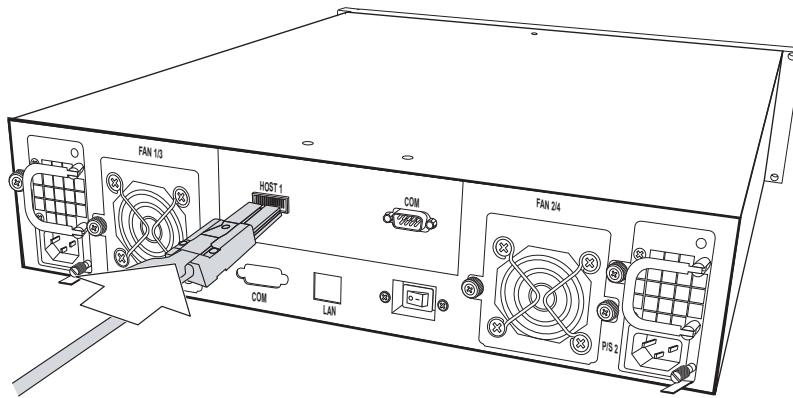

**NR6-8 Serial ATA II Disk Array Systems**

## Connect PCIe cable to the server

First install the controller card (A) into an available PCI slot inside of the host computer (B). Then connect one end of the supplied PCIe cable to the NR6-8. Connect the other end of the cable to the controller card (A).

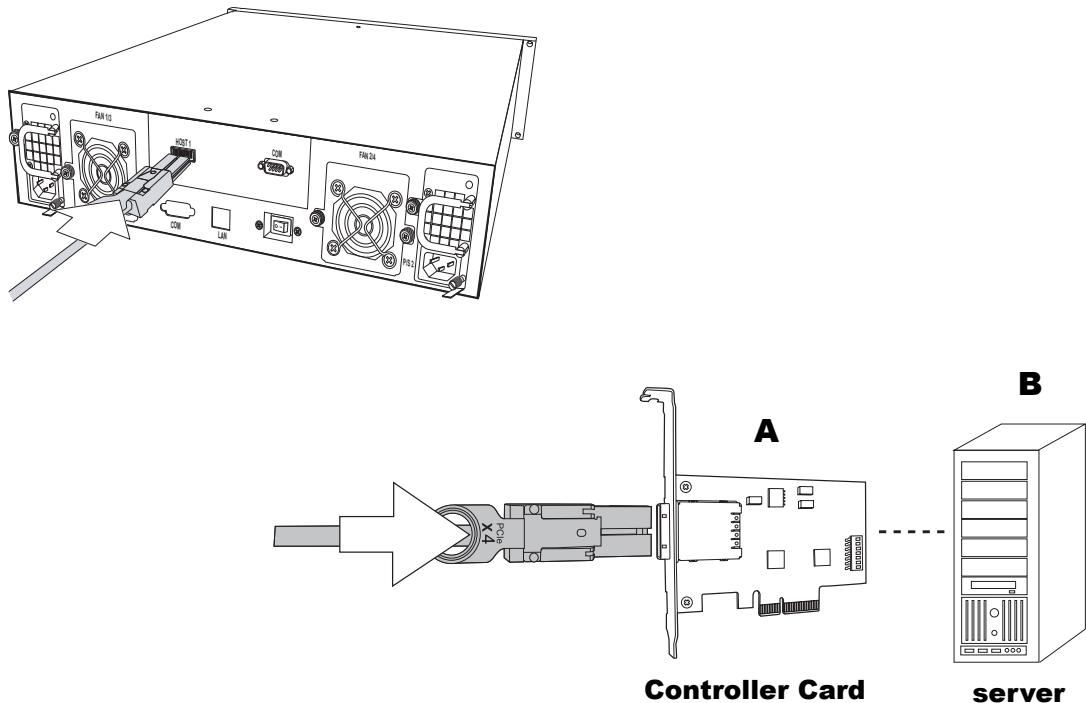

**NR6-8 Serial ATA II Disk Array Systems**


## Connecting and Turning on the Power

- 1 Plug a power cable (A) into one of the power connectors at the rear of the unit, then plug the second power cable into the other power connector (B). After connecting both power cables to the unit, plug each cable into a power source.

---

**Note**

- The system is equipped with auto switching power supplies that can run on 100 to 240 VAC.
  - Always turn on the power to the NR6-8 before turning on the host computer which contains the controller card. Use switch "C" on the back of the NR6-8 to power it on. Always wait approximately 45 seconds after turning on the NR6-8 before turning on the host computer.
- 

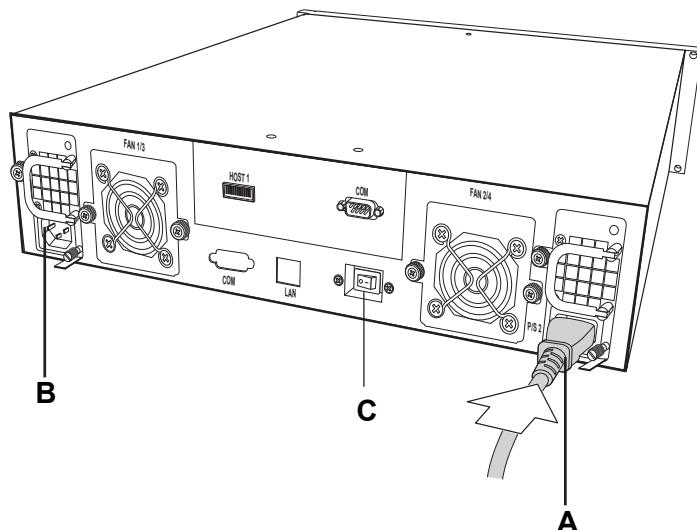

- 2 Use switch (C) on the back of the NR6-8 to turn the unit on or off.

# 3 Maintenance

## Replacing a Disk

A disk failure is indicated when the Power/Error LED at the front of the drive tray turns red and the audible alert sounds.

---

### Note



Turn off the audible alert by pressing the Up ↑ and Down ↓ function buttons on the front panel twice simultaneously.

---

The LCD panel displays failures with the symbols “R” or “W”. “R” indicates a disk failure or other error and “W” indicates that there are too many bad sectors on the disk for it to be used.

### Example:

**111222WR**

- Disks 1 to 3 are members of array group 1.
- Disks 4 to 6 are members of array group 2.
- Disk 7 has too many bad sectors.
- Disk 8 has an error or a fault.

Disks are hot swappable, which means that failed disks may be removed while the NR6-8 is powered on and operating. To prevent data loss, never remove a disk that has not failed. When replacing a failed disk, the replacement disk may be inserted while the system is on and operating. Follow these instructions to replace a failed disk.

- 1 Unlock the front panel door, then pull it open.
- 2 Pull the tray handle away from the disk tray to release it; and pull the disk tray out.
- 3 Remove the screws from the failed disk, then remove the disk from the disk tray.
- 4 Align the rear of the new disk with the rear of the disk tray.
- 5 Insert the new disk into the disk tray.

---

### Note



The new disk must have the same or greater capacity than the faulty disk that is being replaced. If the replacement disk capacity is smaller, the audible alert sounds and the auto-rebuild operations doesn't start. For best performance, it is recommended that the new disk be identical to the failed disk (same brand and model number).

- 6 Attach the disk to the disk tray with the screws that came with the disk.
- 7 Slide the disk tray back into the empty slot, then close the disk tray handle.
- 8 Push the front panel door closed, and lock it.

**NR6-8 Serial ATA II Disk Array Systems**

# Replacing a Power Supply

The NR6-8 is equipped with a Power Supply Fail Indicator LED at the front of the unit that turns red when one of the power supplies fails. The message “Power x failure” appears on the LCD panel, where x refers to power supply 1 or 2 and an audible alert sounds.


---

**Note**

Turn off the audible alert by pressing the Up ↑ and Down ↓ function buttons on the front panel twice simultaneously.

Power supplies are hot swappable, which means that they can be inserted and removed while the disk array is powered on and operating. To prevent data loss, never remove both power supplies at the same time while the unit is on and operating. Follow these instructions to replace a failed power supply.

- 1 Identify the power supply that has failed.

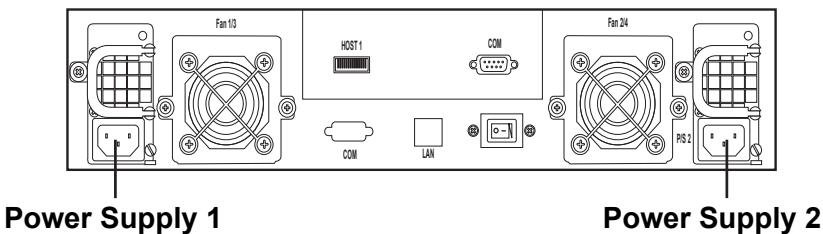


- 2 Remove the power cable from the power supply connector at the rear of the unit.

---

**Note**


The system is equipped with auto switching power supplies that can run on 100 to 240 VAC.

- 3 Loosen the power supply retaining screw.

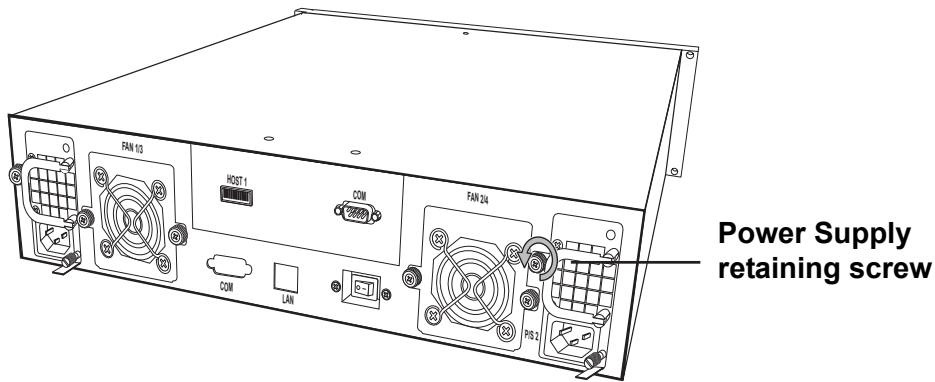


**NR6-8 Serial ATA II Disk Array Systems**


**4** Pull the power supply handle out.

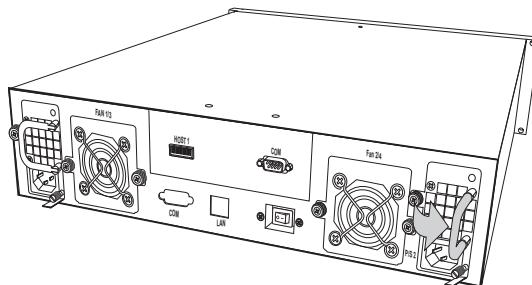


**5** Remove the faulty power supply by pulling the power supply handle **A** and pressing the release catch **B** at the same time.

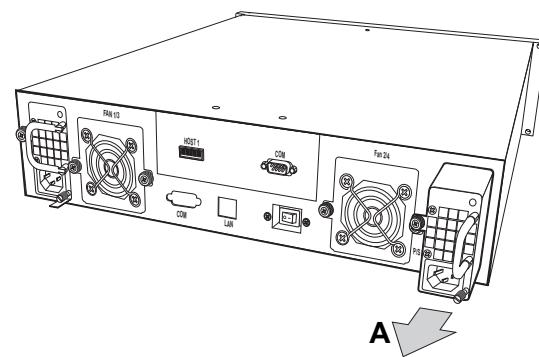

**6** Insert a new power supply.

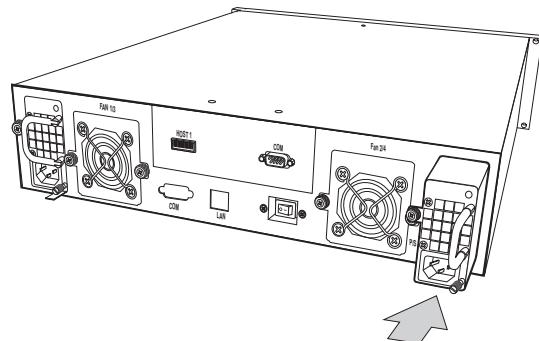


**7** Push the power supply handle into place.

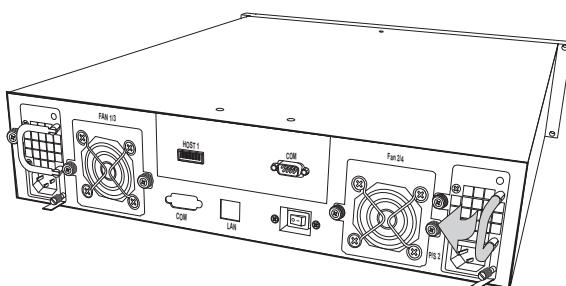

**NR6-8 Serial ATA II Disk Array Systems**

- 8** Tighten the power supply thumbscrew

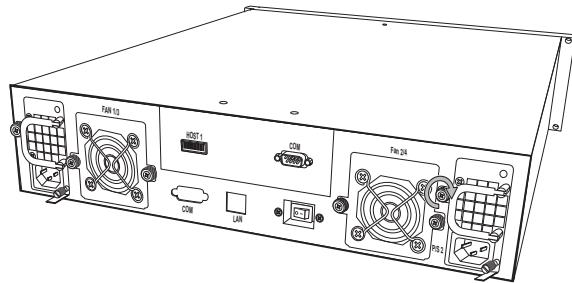


- 9** Reconnect the power cable.


# Upgrading Memory

The NR6-8 uses a single DDR-333 DIMM with a maximum capacity of 2GB. Follow these instructions to upgrade the memory.

- 1 Remove the screws from the NR6-8 top cover and gently pull the DIMM retaining clips outward, the DIMM springs out of the socket. Remove DIMM.

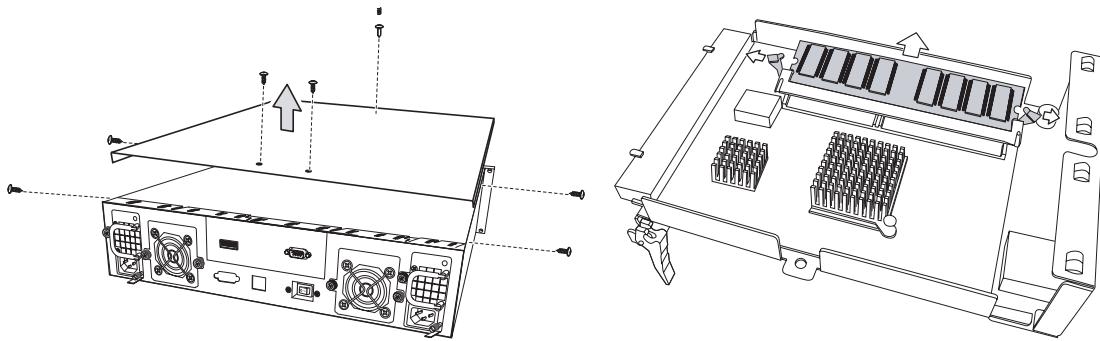

- 2 Gently push the new DIMM into the socket, then push the corners of the DIMM down. The DIMM is secured by DIMM retaining clips. Place the top cover on the NR6-8 and replace the screws to fit the cover.

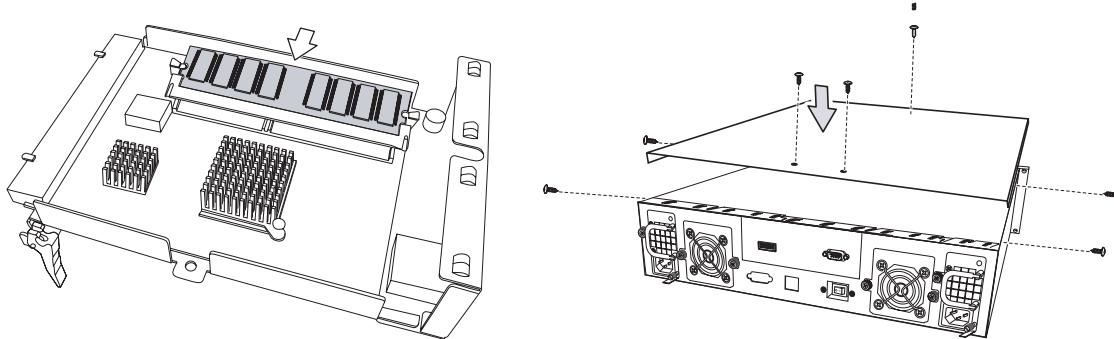

---

## Note



The DIMM module will fit in only one direction. Do not force the DIMM into place.

---

**NR6-8 Serial ATA II Disk Array Systems**

# Replacing a FAN module

When one of the FAN module fails, the message “FANx Fail” appears on the LCD panel. X refers to fan 1 or 2 and an audible alert sounds.


---

**Note**


Turn off the audible alert by pressing the Up and Down function buttons on the front panel twice simultaneously.

---

- 1 Identify the FAN module that has failed, loosen the retaining screws, slide it out of chassis.

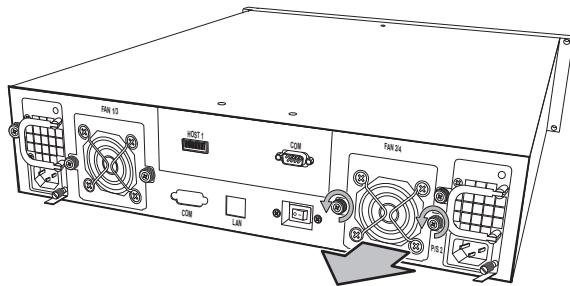

- 2 Insert a new FAN module, tighten retaining screws.

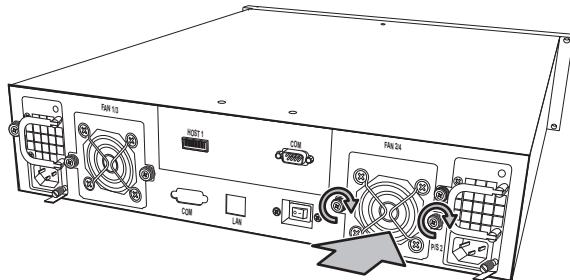

# Appendix

## Hardware Specifications

Item	Specification
Host Interface	PCIe
Disk Interface	SATA II, 3.0 Gb/s
Dimensions	88 mm (H) x 485 mm (W) x 470 mm (D)
RAID Functions	<ul style="list-style-type: none"><li>Raid levels: JBOD, 0, 1, 0+1, 5, 6</li><li>Hot spare support</li><li>Disk hot swapping with automatic online rebuilding</li><li>Multiple RAID (max. 8)</li></ul>
Disk Array Functions	<ul style="list-style-type: none"><li>O/S independent and transparent</li><li>Up to 2GB DDR SDRAM</li><li>LCD panel operation indicator</li><li>Audible alarm/disable alarm</li><li>LED indicator on disk failures</li></ul>
Connectors	<ul style="list-style-type: none"><li>PCIe port</li><li>RS-232 Serial port (115200, 8, N, 1)</li></ul>
Power Supply	<ul style="list-style-type: none"><li>Redundant, 300 Watt</li><li>100 - 240 VAC, 47-63 Hz, 8~4A +/- 10%</li><li>Over voltage, current, power, and short circuit protection</li><li>LED indicates power status</li><li>Operating temperature: 5°C ~ 40°C</li><li>Output: +5V, +3.3V, +12V</li></ul>
Warranty	3 year warranty
Safety	UL, CE and FCC Class B

**NR6-8 Serial ATA II Disk Array Systems**

<b>Item</b>	<b>Specification</b>
Controller	CPU Intel i80333 64-bit RISC microprocessor
	Disk Interface SATA II (3.0 Gb/s)
	Disk Channels 8 channels
	Memory Type DDR-333 DIMM
	Memory Sockets 1
	Memory Size Up to 2 GB
	Button Interface Up, Down, Enter, and ESC
	Backplane Interface Compact-PCI (connector)
Backplane	Temperature Sensors 2
	Disk Channel Support 8 channels
	Disk Number Supported 8 channels
	Disk Connector Type Serial ATA II
	Temperature Sensors 5
	Power Connector Type 2 x Slot-2
	Fan Connector Type 4 x Slot-2